210X148mm

USE OF THE HAIR DRYER:

Remove the handpiece from the wall mounted cradle.

The on/off switch is located on the wall unit. To operate the dryer, depress the button on the handpiece. The appliance will cease to operate when the finger is removed from the switch on the handpiece. The speed of the hair dryer can be altered by shifting the switch on the handpiece to Max for high speed or Min for low speed.

Hold the handpiece at least 30cm from the head to avoid the possibility of hair being sucked into the dryer.

Ensure that the voltage of the hair dryer is the same as the power supply. Do not use the hair dryer while in the bath or shower or when using the hand basin.

Do not place the hair dryer into water or other liquid.

Do not use the hair dryer if it has a broken or cracked housing or loose components.

If appliance cord is damaged, it must be replaced by a qualified electrician to avoid danger.

Never block the air opening, or place on a soft surface such as a bed or couch whilst in operation.


Never drop the hair dryer or insert any object into the air opening. Do not direct hot air towards eyes or other heat sensitive areas.

Do not wrap the power cord around the hairdryer. When not in use, replace the handpiece on the cradle.

The hair dryer is not intended for use by young children or infirm persons without proper adult supervision. Young children should be supervised to ensure they do not play with the appliance.

Please note, if the hair dryer is not permanently wired and is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction Children being supervised not to play with the appliance

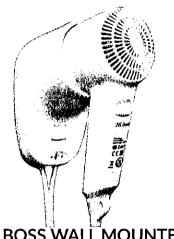

HI BOSS WALL MOUNTED HAIR DRYER

SKU: ELAP1050

Specifications: Power output:

Model No. RCY67220 1200W Max, 540W Min.

230V - 50Hz Voltage:

DISTRIBUTED BY

HITCHON INTERNATIONAL LTD 32 Hammersmith Drive, Sockburn Christchurch, 8042, NEW ZEALAND.

Ph: +64 3 366 6143 Email:sales@topmaq.co.nz


CONTENTS OF PACKAGE:

- 1x Hair Dryer
- 1x Wall Mounting Unit
- 2x Screws with toggles
- 1x Mounting hook
- 1x Cover Plate
- 1x Manual

CHARACTERISTICS OF THE PRODUCT:

- 1. Wall Unit
- 2. Hair Dryer handpiece
- 3. On/Off Switch 4. Speed Control Switch
- 5. Trigger Switch



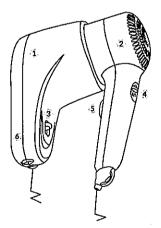


CLEANING THE DRYER:

Please pull out the power plug from electrical outlet when cleaning the hair dryer. Pull loose hair from the air opening.

Lightly clean the outside of the housing with damp cloth. Do not use liquid spray or abrasive.

INSTALLATION:

The Hi Boss hair dryer is intended for permanent wall mounted installation. When fitted in a bathroom, we recommend that the 3 pin plug be removed and the appliance permanently wired into the wall by a suitably qualified person, your electrician. If this is not possible, the dryer should only be used if plugged into an RCD device. The hair dryer must be fixed so that the wall unit and handpiece are out of reach of a person using the bath or shower

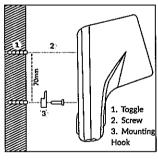

WALL MOUNTING -NOT HARD WIRED Drill 2x 6mm diameter holes, separated vertically at a distance of 70mm. Place toggles (supplied) in the holes. Use 1x screw to secure the small mounting hook to the wall. Slide the wall unit on to the mounting hook. Push the second screw through the hole in the wall unit and screw the unit to the wall. Place cover plate over the access hole at the bottom of the front wall unit panel.

1. Screw

- 2. Front-Housing
- 3. Plastic Inserts

WALL MOUNTING - HARD WIRED

Drill 2x 6mm diameter holes, separated vertically at a distance of 70mm. Place toggles (supplied) in the holes. Unscrew 2x screws in the wall unit to remove the base. Punch out the plastic insert to allow hard wired power supply cable to be attached. Attach the power supply cable to the hair dryer (this must be done by a suitably qualified person). Use 1x screw to secure the small mounting hook. Slide the wall unit on to the mounting book. Push the second screw through the hole in the wall unit and screw the unit to the wall.