

MECHANICAL FIREPROOF SAFE

(FOR YB-A/BF-2 SERIES)


! Please do not keep emergency keys in your safe!

Dear valued customer:

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Schematic drawing

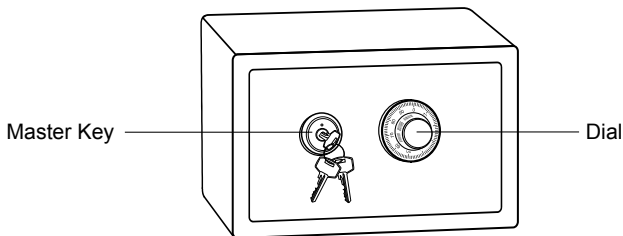

Series No.

--

Combination No.

1st
4 times(R)
2nd
3 times(L)
3rd
2 times(R)
4th
1 times(L)


OPENING DOOR

All numbers must be dialed exactly. If you pass a number, you can not go back. You must start again.

- Turn the Dial clockwise and tune the 1st combination number to the Top Notch four times gently and exactly.

- Turn the Dial counter clockwise and tune the 2nd combination number to the Top Notch three times.
- Turn the Dial clockwise and tune the 3rd combination number to the Top Notch twice
- Turn the Dial counter clockwise and tune the 4th combination number to the Top Notch once.
- Put the key in the key hole and turn until it stops and pull it towards you. Now the door will be open.

Example: Dial combination numbers 70-50-30-10

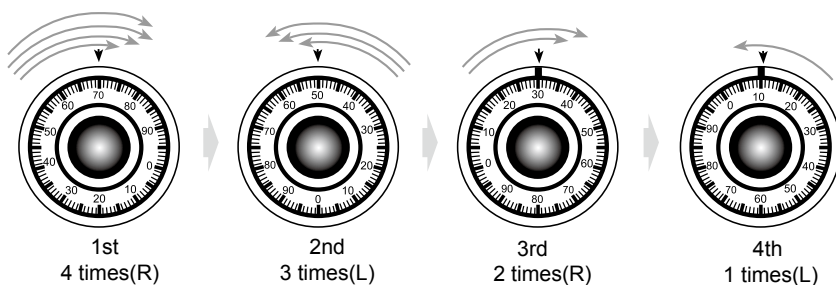

CLOSING DOOR

- Close the door.
- Pull out the key after turning counter clockwise to the original position
- Turn the Dial either direction a few rounds.

IMPORTANT

- The initial combination can not be changed, please keep keys and combination number in a secure place, away from children.
- Keep this record of your key number and combination in a secure place separate from your strong box safe.