

Smoke House

Operator's Manual

DSH-C08

DSH-S08



DSH-S03L (mechanical

DSH-S04 (Digital type)



Table of Contents

Introduction

Parameter

Smoking Meat

Important Safeguards

Operating Instructions

Troubleshooting

Cleaning and Maintenance

Limitation of Liability

Warranty

Exploded View

Introduction

Congratulations! You have purchased a smokehouse designed, engineered and constructed by a company with 10 years experience in creating products for making homemade sausage. The materials used will give you years of trouble free service, provided that you carefully follow the use and maintenance instructions in this manual. Please remember that this smokehouse must always be monitored when in use. Like any piece of cooking equipment, it generates heat that, if not controlled, may lead to fires and possible injuries.

Parameter

Note: Due to continuous products improvement, specification may change without notice

Item No.	Name	Voltage	Layers	Power (W)	Sizes CM	Temperature oC
DSH- S03L	Mechanical	110V or	4	1000	45*40*119	0-135
DSH- S03	Controller	220V				
DSH- S04	Digital	110V or	4	1000	45*40*87	0-135
DSH- C04	Controller	220V				
DSH- S05	Digital	110V or	6	2000	45*40*118	0-135
DSH- C05	Controller	220V				
DSH- S06	Mechanic	110V or	6	2000	45*40*118	0-135
DSH- C06	Controller	220V				

DSH- S07	Mechanic	110V or	4	1000	48*44*61	0-1313	Extreme caution must be used when moving any appliance.
DSH- C07	Controller	220V					Do not move this smoke house while operating.
DSH- S08	Digital	110V or	4	1000	48*44*61	0-1314	If there are any questions about this appliance, contact the Manufacturer.
DSH- C08	Controller	220V					
SDH- S09	Mechanic	110V or	8	2000	50*40*130	0-135	0-3h S/S
SDH- C09	Controller	220V					

Operating Instructions

Remark :DSH-S05/S06/S07/S09, DSH-C03/C04/C05/C06/C07/C09 are not available

Smoking Meat

Smoking meat can accomplish two things simultaneously: it can prepare meat for long term storage and impart unique flavor profiles depending on the ingredients and methods used. There are so many different recipes and methods that they cannot be adequately covered in this manual.

We hope everybody like DIY your own taste and wonderful sausage

Important Safeguards

1. Read ALL of these instructions thoroughly before using.
2. Save these instructions for future reference.
3. Never leave your smokehouse unattended.
4. Never use your smokehouse indoors.
5. Close supervision is necessary when this smokehouse is used near children.

NOTE: This machine is not intended for use by children.

6. Smokehouses are major appliances and should only be used by a person that is familiar with smoking procedures.
7. This smokehouse operates at 220V,50Hz or 110 volt, 60Hz, 9 amps and should be serviced only by a qualified electrician. Failure to do so may result in electrical shock, bodily injury or property damage.
8. As with any electrical appliance, basic safety precautions should always be followed. Your smokehouse is really a cooking utensil and needs your complete attention. It is no different from using an oven, barbecue grill or frying pan at home. We all know what can happen if they are left unattended for any length of time. Follow basic safety precautions and enjoy your smokehouse.
9. To protect against electrical shock, do not immerse cord, plugs or heating element in water or other liquid. Avoid using this smokehouse in the rain.
10. Unplug this smokehouse when not in use.
11. Unplug this smokehouse before cleaning or servicing.
12. Do not operate any appliance with a damaged cord or plug, after the appliance mal-functions, or has been damaged in any manner.

Our smokehouses are about as simple to operate as your kitchen stove. The proper and efficient operation of this smokehouse rests with you. This appliance is equipped with a digital control and thermostat which has a probe located on the rear interior wall for relaying accurate temperature readings. The digital thermostat has a range of 10° C (50° F) to 90° C (200° F). The ideal temperature when smoking sausage is 73° FC (165° F). This can be monitored by checking the thermometer

THE SMOKEHOUSE TEMPERATURE SHOULD NEVER EXCEED 76° C (170°F) AT ANY TIME WHEN SMOKING MEATS.

ONLY OPERATE THIS APPLIANCE AFTER YOU HAVE READ AND UNDERSTAND THESE INSTRUCTIONS. IF YOU HAVE ANY DOUBTS, CONTACT THE MANUFAC-TURER.

Operating Instructions, cont'd

1. Fully open the damper located on the top of the smokehouse by turning the lever on the damper stack. Preheat the smokehouse to 54°C (130° F) by pressing ON once, Press SET TEMP once, when LED display is blinking use +/- Buttons to adjust to 54°C (130° F), when acquired Press SET TEMP to lock in Temperature. Without Setting a Timer, the heating element will not turn ON. To set a timer Press the SET TIME button once, when LED display is blinking use +/- Buttons to select the duration of the Timer (sug-gestion: Enter a slightly longer time than it will take to finish smoking process). Monitor the inside temperature using the LED Control Display.
2. While you are waiting for the smokehouse to preheat, dampen the sawdust. Do not soak it or get it too wet or it will create extra moisture that will condense on the inside of the smokehouse. On the other hand, if it is too dry, it may create an open flame which may scorch the meat and/or damage the smokehouse. There are three ways to check if your sawdust has reached the proper dampness.
 1. There should be no visible water collecting in the bottom of the sawdust pan,
 2. All of the sawdust should now be a darker color
 3. When you pick up a little more than a pinch of sawdust and squeeze it in your fingers, water should not drip out. The amount of sawdust used greatly depends upon individual taste. Using one full pan is a good place to start,

but you can use more if you desire a stronger taste. Set it aside for Step 4.

3. After approximately 15 minutes, place the product you will be smoking in the smokehouse, close the door and let the product dry for 30-45 minutes at 54°C (130° F).
4. Open the smokehouse door and carefully place the sawdust pan with sawdust in it.
5. (TIP: Pack the dampened sawdust in the pan and create a hole in the middle of sawdust. This will help to keep the sawdust smoldering and create a heavy smudge.) Close the door, leave the damper open and enter 68° C (155° F) on the smokehouse control.
6. When you see smoke coming from the smokestack (this could take up to 10 minutes), lower the temperature to 60° C-63° C (140-145° F) and hold at this temperature until the desired temperature is reached. Close the smokestack to 1/4 open (repeat Step 4 if smoke stops). Raise the temperature every 1 1/2 hours until the smokehouse temperature reaches 71° C-74° C (160-165° F). Hold at this temperature until the internal temperature of the product you are smoking reaches 66°C (152° F).
7. When 66° C 152° F is reached, turn off the smokehouse and carefully remove sausage.
8. Shower with cold water until the internal temperature reaches 49°C (120° F)
9. Refrigerate sausage overnight. Product is now ready to eat or freeze.

NOTE: A separate temperature probe should be purchased to monitor the internal temperature of the meat.

HOW TO OPERATE IT?

To connect wiring

1. Connect 1-1,2-2, 3-3, 4-4 COM well.



2. Put thermometer to the hole so it can work fine, and fix it well.
3. Install the Controller box correctly

4. To Working


MACHANICAL CONTROL OPERATING INSTRUCTIONS

(DSH-S03)



1. Plug in, Push on-off button, Power
2. To set temperature by temperature
3. To set time by timer
- Green light on, the smoker start to

DIGITAL CONTROL OPERATING INSTRUCTIONS (DSH-S04/S08)

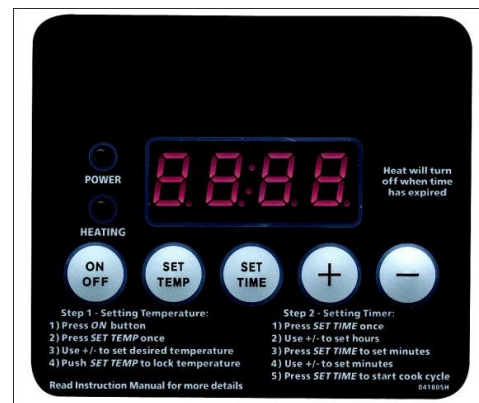

To Set Temperature:

1. Press ON button
2. Press SET TEMP button once- LED display will blink.
3. Use +/- to set temperature
4. Press SET TEMP button again to lock in temperature

Note: The Heating Element will Not turn ON until Timer is set.

To Set Timer:

1. Press SET TIME button - LED display for hours will blink.
2. Use +/- to set hours.
3. Press SET TIME button again to lock in the hours. The minutes LED will blink.
4. Use +/- to set minutes.
5. Press SET TIME to lock in minutes and begin Heating. Heat will turn off when time has expired.

Procedure to RESET Control Panel: If an error message appears on the control panel, turn smoker OFF, unplug unit from outlet, let unit sit 15 seconds, plug unit back into the outlet, turn smoker back ON. This procedure will reset the control panel.

Troubleshooting

What happens during the smoking process?

During the smoking process, smoke emits acids which cling to the meat and to the outside layer of skin. This acid helps preserve the

meat by preventing the growth of surface mold and bacteria compounds.

How long does it take to smoke a sausage?

A 19 mm casing takes approximately 7 hours, a 32-35 mm casing takes approximately 8 hours, a 3 1/2" synthetic casing may take up to 12 hours, and a ham can take a couple of days.

Troubleshooting, cont'd

How do I know when the meat is smoked?

You can identify that your meat is fully smoked by the distinctive color that develops as a result of the carbon compounds combining with the meat pigments. Also, the cures that are used will give smoked meat a red color.

How do I use the sawdust or wood chips?

The sawdust or wood chips should be dampened, yet not soaked. Dampened sawdust will burn for a longer period of time and will impart gentle flavors into the meat. To dampen, place sawdust in a bucket or bowl and squirt with a water bottle. You should mix the saw-dust as you add the water to make sure all of the sawdust is moistened.

Can I cold smoke with my smokehouse?

It all depends on what you mean by "cold smoke". Cold smoking refers to a smoking process in which the heat source is in one area while the smoke is forced into another area where the meat product is. In other words, the meat will have a smoked flavor, but will not be exposed to heat. If you are referring to making sausage and keeping the temperature within the 76° C (170° F) area, then yes, this is what our smokehouses are designed for. Smoking sausage is a slow process. The temperature of the smokehouse should be between 74° C (165°F) and 76° C 170° F. When the temperature rises higher, between 190 degrees and 200 degrees, the fat breaks down, and over 93° C (200° F) you will melt the fat.

Can I use liquid smoke and still use my smoker?

Yes, you can. Just add liquid smoke to your spices and mix with the meat. Then proceed to use the smokehouse at the low temperatures as instructed.

Can I put more sausage in my smokehouse than suggested?

No. If overloaded, the time from start to finish will be greatly increased. Also, if the meat is touching there will be discoloration where the smoke was not able to penetrate the meat.

Can I do BBQ Ribs in my smokehouse?

No. The Smokers are made for the sole purpose of smoking meat

and are meant for temperatures no higher than 88° C (190° F). If the temperature

goes higher the fat melts, which can cause the heating element to burn out or may cause a fire in the smoke-house itself.

Why was there liquid on the bottom of my smokehouse after smoking?

Your temperature was too high and it melted the fat in the meat. My sausage does not look good, it is shriveled.

What do you think was the problem?

There could be several reasons for these results. The temperature may have risen too high and either melted or repositioned the fat. Also, the sausage may not have been showered with cold water immediately after it was finished smoking. Finally, the sausage casings may not have been stuffed to their full capacity. Most of my sausage has a nice mahogany color, but there are areas of white spots. Why? If the sausage was touching during smoking, the smoke was not able to penetrate that area, leaving a white spot after smoking. There is no problem with your sausage.

Cleaning and Maintenance

Your smokehouse has been designed to give you years of trouble-free service, provided that it is properly maintained. After each use, unplug the smokehouse and allow it to cool. Do not try to clean it while it is still hot. Wipe it down with a good cleaner or detergent. If possible, avoid scouring the surface as this will mar the finish and promote sticking in sub-sequent uses. You can use cleaner that does a great job. If you have excessive amounts of dripping or if there is liquid in the bottom of your smokehouse, it should be cleaned up immediately.

Limitation of Liability

The remedies of the user set forth under the provisions outlined above are exclusive and the total liability of Hakka or its distributors with respect to this sale of the equipment and service furnished hereunder, in connection with the performance or breach thereof, or from the sale, delivery, installation, repair or technical direction covered by or furnished under this sale, whether based on contract, warranty, negligence, indemnity, strict liability or otherwise shall not exceed the purchase price of the unit of equipment upon which such liability is based. Hakka and its Distributors shall in no event be liable to the user, any successors in interest or any beneficiary or assignee relating to this sale for any consequential, incidental, indirect, special or punitive damages arising out of this sale for any breach thereof, or any defects in, or failure of, or malfunction of the equipment

under this sale whether based upon loss of use, lost profits or revenue, interest, lost goodwill, work stop-page, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase or replacement power claims of user or customers of the user for service interruption whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability or otherwise

Warranty

Hakka through its Distributors, warrants each new product sold by it to the initial user to be free of defects in material and workmanship for a period of one year from the date of sale of the equipment. With respect to the sale of spare parts, such warranty period shall be three (3) months from the date of sale. Hakka will provide a new or repaired part, at its election, in place of any part which is found upon inspection to be defective in material and workmanship during the period described above. Purchaser must present proof of purchase and purchase date at the time of exercising this warranty.

This warranty does not apply to failures occurring as a result of abuse, misuse, negligent repairs, corrosion, erosion and normal wear and tear, alterations or modifications made to the product without express written consent of Hakka or failure to follow the recommended operating practices and maintenance procedures as provided in the products operating and maintenance publications. The warranty provided herein does not apply to equipment sold hereunder but manufactured by others as they are warranted by their respective manufacturers directly to the user. This warranty is in lieu of all other warranties (except of title) expressed or implied and there are no warranties of merchantability or of fitness for a particular purpose.

IMPORTANT WARRANTY INFORMATION!

Please fill out and return this warranty card immediately. Your warranty cannot go into effect until we receive your registration.

First Name: _____ **Initial Last Name:** _____

Street: _____ **Apt.. No.:** _____

City: _____ **State Zip Code:** _____

Telephone: _____ **Fax (If Available):** _____

Email Address: _____

Note: This registration is Void without purchase information.

Date of Purchase: _____

Where Purchased: _____

Month Day Year _____

Other: _____

Name of Product _____

Item Number: _____

To Help us serve you better, please tell us a little about the reason you purchased this item: This is for:


☐ **Personal Use** ☐ **Small Business** ☐ **Camping** ☐ **Other**

(please describe) _____

Comments: _____


EXPLORED VIEW

DSH-S03L

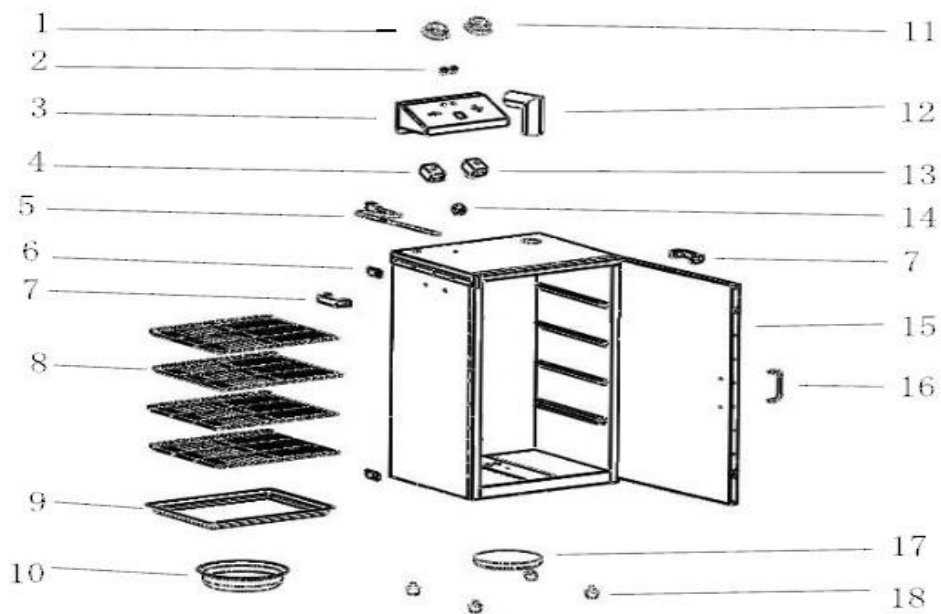

NO.		qty
1	Knob(for Temperature controller)	1
2	Power indicator lights	2
3	Wires storage box	1
4	Temperature controller	1
5	Power cord	1
6	Door latch	2
7	Plastic handle	2
8	Grids shelf	4
9	Square pan	1
10	Woodchips pan	1
11	Knob(for timer)	1
12	air valve	1
13	Timer	1
14	On-off switch	1
15	Machine body	1
16	Stainless steel handle	1
17	Heating element	1
18	Rubber feet	4

DSH-S04

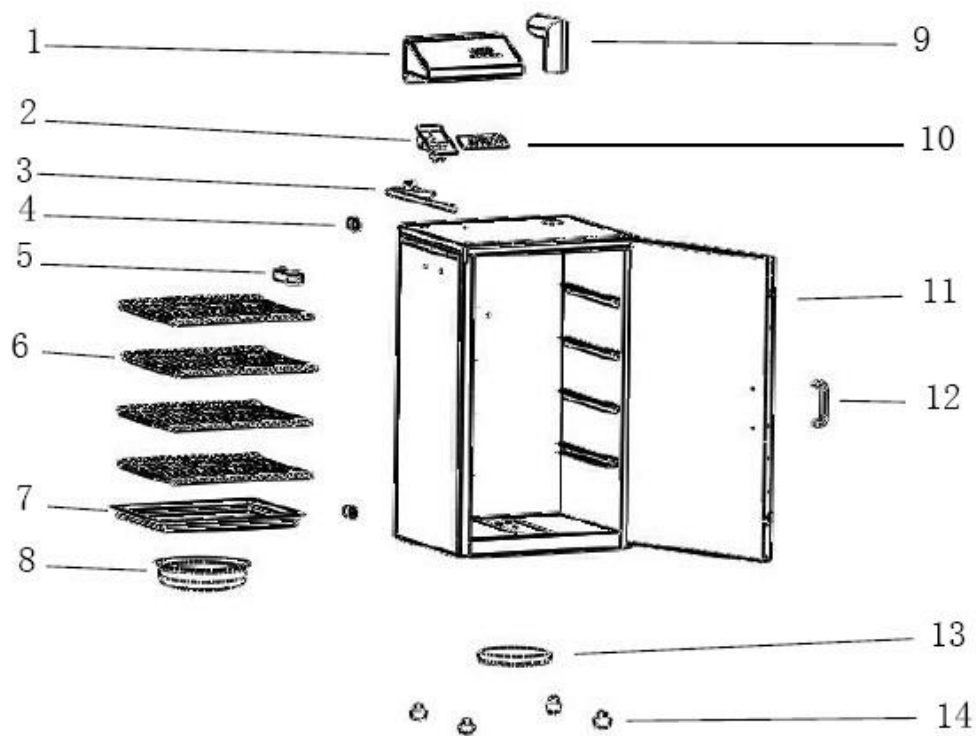

NO.		QTY
1	Wire storage box	1
2	Circuit board 1	1
3	Power cord	1
4	Door latch	2
5	Plastic handle	2
6	Grid shelf	4
7	Square pan	1
8	woodchips pan	1
9	Air valve	1
10	Circuit board 2	1
11	Machine body	1
12	Stainless steel handle	1
13	Heating element	1
14	Rubber feet	4